



Asset Tracker (GV600 for Powered Assets) | Installation Guide

Content

Overview on Asset Tracker GV600	3
What's in the box?	3
Primary connectors	4
Installation Steps	5
Setting up asset tracking on Azuga Fleet	7

Overview on Asset Tracker GV600

The Asset Tracker GV600 is a ruggedized waterproof GPS tracker specially designed for trailer, tanker, reefer and flatbed truck tracking.

It has up to a 120 day standby time using an internal rechargeable 5800 mAH battery and supports one external power source.

What's in the box?



- GV600 Asset Tracker



- 18-pin harness




- Temperature sensor



- Installation guide

Primary connectors

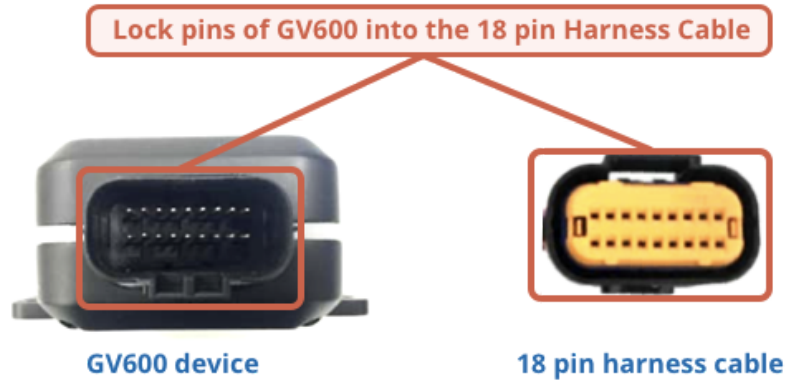

Definition	Description	Wire Connector	Pin
Power	Primary Power (8-32V)	Red	1
AGND (Analogue ground)	Primary ground	Black	3
Ignition	Ignition Detection Input, Positive Trigger	White	5
1-wire	Temperature sensor input	Grey	9


For tracking purposes connect the Red wire to the Primary Power and Black to the Ground. For information on other wires please contact us @customercare@azuga.com.

Note - The main color of the dual color cable is the first one, for example, Black/White means black is the main color, and white is the secondary color.

Installation Steps

Prerequisites

- Ensure the side with the antenna is facing towards the sky with a clear line of sight to have better signal reception.

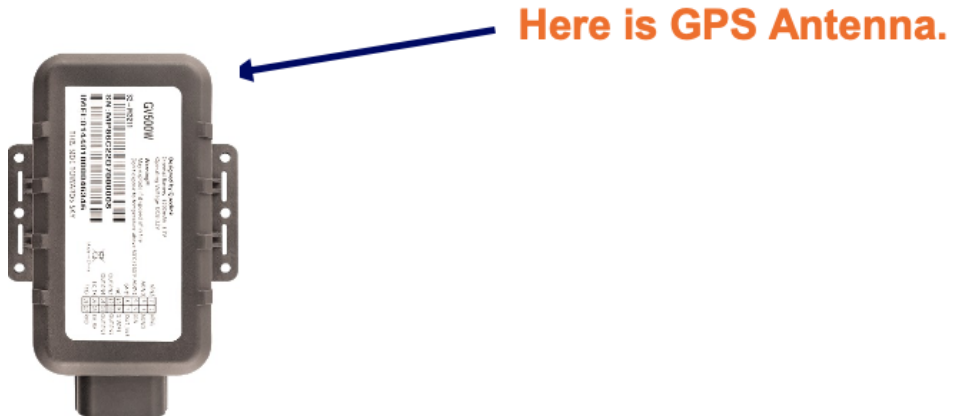

- Firmly install the device to a reliable surface to prevent falling off.
- Do not install the device under a metal surface or in enclosed environments having difficulty in getting GPS and network signals.

Steps

1. Determine an appropriate location on the asset to mount the device (follow the below guideline)




- The GV600 device must have an unobstructed view of the sky
- The location of the device must be such that the lights from the status LEDs are easily visible

- Install the screws in front.




- Install and tighten 4 screws on the bottom shelf.

Note : Install the screws in opposite angles order. Do not fully tighten the screws at the beginning. When all four screws are installed, then fully tighten them. Otherwise, the waterproof capability may be deteriorated due to uneven tightening

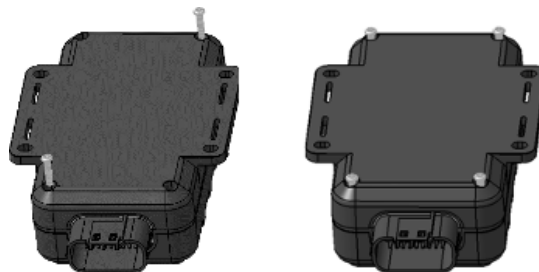

2. Connect the wires to appropriate power sources

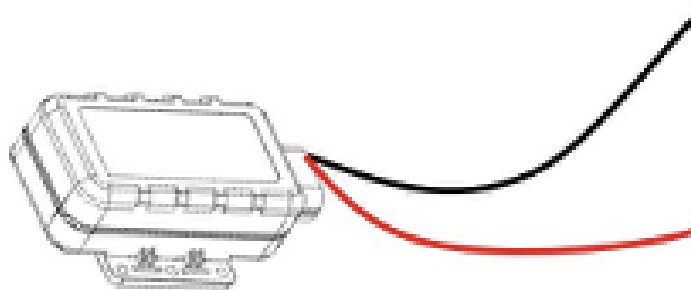

- The power input (Red wire) must be connected to a constant +12V or +24V power supply
- The ground line (Black wire) must be connected to chassis ground

3: Observe the following LED sequence once installed



LED Type	LED Status	Device Status
CELL LED	Slow flashing	Device has registered to CELL network
GPS LED	On	GPS chip has got GPS info
POWER LED	Fast flashing	External power in and internal power charging
	On	External power in and internal power fully charged

Note - If the device is showing the above mentioned LED statuses, please proceed to setting up the device on Azuga in the next step or contact customercare@azuga.com for further assistance.

Setting up asset tracking on Azuga Fleet

The Azuga Fleet web application allows you to set up, track and manage your assets. To start tracking, you need to assign the tracking devices to your assets. The steps to do this are listed below:

1. Note down the serial number of the asset tracker device. Identify which asset this device will be installed into and give it a 'friendly name'. For example, 'Generator'. Note this down. Please keep these asset names short.

Note - Ensure this step is repeated for all devices that you have with you.



2. Log into the Azuga Fleet web application <https://apps.azuga.com/azuga/login.html> using your credentials

azuga FLEET

Login to your account

Username

Password

Keep me logged in [Forgot Password?](#)

Login

- Or -

[Login with SSO](#)

Available for mobile on

Download on the App Store GET IT ON Google Play

© 2020 Azuga | [Privacy Policy](#)

Read our latest blog posts

How the Power of Big Data Works for Pest Control Fleets

[Read now](#)

Tune Up for Safety - National Safety Month of June

[Read now](#)


(888) 790-0715

© 2020 Azuga. All rights reserved.

Note - recommend that you change your password the first time you log into Azuga portal.

- Click here [How to change password](#) to learn more about changing the password.
- In case you forgot your password, Azuga lets you reset your password. Click here [Reset Password](#).


- Once you login, navigate to the Assets page under Admin tab
- Type the IMEI number of the device you noted down. You will notice that the asset name is the same as the device serial number. Azuga does this by default when the devices are initially tested.
- Click the pencil icon corresponding to the asset you wish to edit.

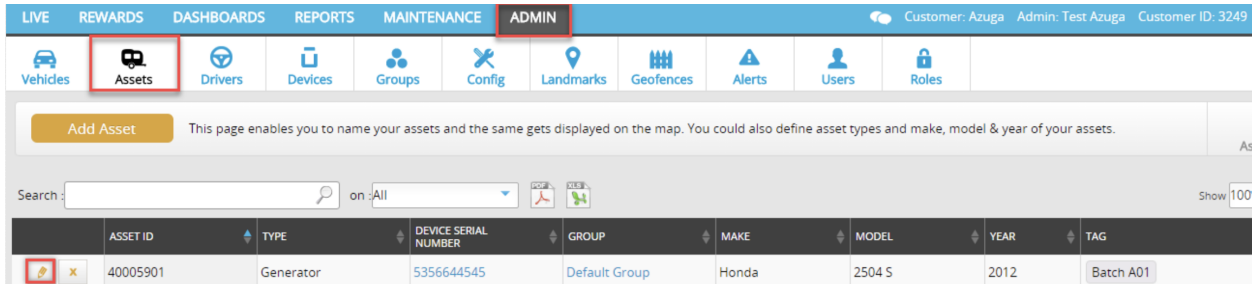

- Update the form with appropriate details. Click the field you wish to edit and add/modify/remove text. Change the asset name and give it a 'friendly name' (e.g. 'Generator'). This name needs to be unique. You cannot have two assets with the same name. Also, fill in the mandatory fields (marked with a *)
- Click **Update Asset**. Repeat these steps for the remaining assets. Note that the asset names need to be unique.

Where are my assets located?

The Live page on the Azuga website lets you track your assets in real time. It gives you the latest snapshot of all the assets present in your account. It provides you with details such as the current location, last activity reported to the server, and speed. You can also find the current location of an asset by looking at the map.

Note: In the Live data table, an entry with the trailer  icon represents an asset.

Click the name of the asset to get the breadcrumb trail of the asset's movement.

[LIVE](#)
[SAFETYCAM](#)
[REWARDS](#)
[COACH](#)
[DASHBOARD](#)
[REPORTS](#)
[MAINTENANCE](#)
[ADMIN](#)
[DEVELOPER](#)
[ELOGS](#)
Azuga Sales Demo Admin

Choose Vehicle: Trailer_22
Default Group
From Jan-10-2021, 09:00 PM PST to Jan-11-2021, 08:59 PM PST
Custom Dates

Search: on: All
PDF
Excel
Print
Show 500 entries

<input checked="" type="checkbox"/>	DATE	EVENT	SPEED	ADDRESS
<input checked="" type="checkbox"/>	Jan-11-2021, 03:30 PM GMT	GPS Tracking	0 MPH	54 Gilbert Ln, Branford, CT 06405, USA
<input checked="" type="checkbox"/>	Jan-11-2021, 03:40 PM GMT	Asset Trip Start	0 MPH	54 Gilbert Ln, Branford, CT 06405, USA
<input checked="" type="checkbox"/>	Jan-11-2021, 03:42 PM GMT	GPS Tracking	40 MPH	46 Todds Hill Rd, Branford, CT 06405, USA
<input checked="" type="checkbox"/>	Jan-11-2021, 03:44 PM GMT	GPS Tracking	39 MPH	6 Short Rocks Rd, Branford, CT 06405, USA
<input checked="" type="checkbox"/>	Jan-11-2021, 03:46 PM GMT	GPS Tracking	41 MPH	27 Business Park Dr, Branford, CT 06405, USA
<input checked="" type="checkbox"/>	Jan-11-2021, 03:48 PM GMT	GPS Tracking	42 MPH	138 Red Hill Rd, Branford, CT 06405, USA
<input checked="" type="checkbox"/>	Jan-11-2021, 03:50 PM GMT	GPS Tracking	40 MPH	1298 Moose Hill Rd, Guilford, CT 06437, USA
<input checked="" type="checkbox"/>	Jan-11-2021, 03:52 PM GMT	GPS Tracking	41 MPH	250 Long Hill Rd, Guilford, CT 06437, USA
<input checked="" type="checkbox"/>	Jan-11-2021, 03:54 PM GMT	GPS Tracking	40 MPH	727 Boston Post Rd, Guilford, CT 06437, USA

+ -
Map
Satellite
Weather
Traffic